

 
 
 
 
 
 

 
 

 





 




 

 


 
 

 

 
 
 
 
 
 
 
 
 
 
 
 








 

 
 

 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR		Smart
	DVD		Media
	Open / Close		Eject
	Title / PBC		Text
	Menu		Menu
	Display		Info
	Input		AV
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Right		Right
	Left		Left
	Enter / OK		Ok
	Down / PR -		Ch -
	Setup		D. Menu
	Clear / 3D		Red

Originalfernbedienung Ersatzfernbedienung

	Repeat		Shift + Text
	A-B		Shift + Red
	Subtitle		Subt
	Audio		Dual
	I<< Prev		I<<
	Play / Pause		Play
	Play / Pause		Pause
	Next >>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Program		Sleep
	CLK / CNT		List
	Search		Shift + TV/R
	Zoom		Shift + Eject
	Rec		Rec
	TV / VCR		TV/R





Originalfernbedienung Ersatzfernbedienung

	Originalfernbedienung	Ersatzfernbedienung
	ANGLE/SPEED	ANGLE / Speed
	PICTURE	FORMAT
	FORMAT	Format
1	1 / Tracking -	1 1
1	1 / Tracking -	VOL - Vol -
2	2	2 2
3	3 / Tracking +	3 3
3	3 / Tracking +	+ VOL Vol +
4	4	4 4
5	5	5 5
6	6	6 6
7	7	7 7
8	8	8 8
9	9	9 9
0	0	0 0
SYSTEM	System	SETTINGS OPT Options

Originalfernbedienung Ersatzfernbedienung

	Originalfernbedienung	Ersatzfernbedienung

