
 
 

 
 




 

 
 

 

 

 


 
 
 











Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Prog		Sleep
	Display		Info
	Open/Close		Eject
	N/P		Smart
	Subtitle		Subt
	Language		Dual
	Angle		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide
	Time		AV
	Setup		Options
	Zoom		Shift + Eject
	L/R		3D
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Step		Yellow
	<<		<<
	>>		>>
	Slow		Blue
	Pause		Pause
	Play		Play





Originalfernbedienung    Ersatzfernbedienung

	Stop		Stop
	I<<		I<<
	>>I		>>I
	A-B	+	Shift + Play
	Title	 	Exit
	Repeat	 	Text
	Menu	 	Menu
	Return	 	Back
	Vol+		Vol +
	Vol-		Vol -
	Mode		Green

Originalfernbedienung    Ersatzfernbedienung