




 
 
 

 
 











 
 

 





 




**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	Dimmer		Guide
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Repeat A-B		3D
	Repeat		Text
	Random		Media

**Originalfernbedienung    Ersatzfernbedienung**

	Zoom		Shift + Eject
	Clear		Exit
	Search Mode		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Top Menu		Shift + Menu
	Menu/Pop Menu		Menu
	Setup		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Angle		AV





Originalfernbedienung Ersatzfernbedienung






 
 
 

 
 











 

 

 



 


	Subtitle		Subt
	Audio		Dual
	Pure Direct		Format
	Display		Info
	Mode		Smart
	I<< Skip		I<<
	Skip >>I		>>I
	Stop		Stop
	Play		Play
	<<		<<
	>>		>>
	Still/Pause		Pause

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	Dimmer		Guide
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Repeat		Text
	Random		Media
	Zoom		Shift + Eject

**Originalfernbedienung    Ersatzfernbedienung**

	Repeat A-B		3D
	Clear		Exit
	Search Mode		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Top Menu		Shift + Menu
	Pop Up		Menu
	Setup		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Angle		AV
	Pure Direct		Format
	Display		Info
	Mode		Smart
	I<< Skip		I<<
	Skip >>I		>>I
	Stop		Stop
	Play		Play
	Still/Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung