






 
 








 

 



 











 



 
 






 



 
 



 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Return		Back
	Eject		Eject
	Play		Play
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Sys Menu		D. Menu
	Display		Shift + Info
	Picture		Format
	Sound		Shift + Dual
	Timer		Shift + AV
	Nicam/A2		Options
	Lan/Prog-		Ch -
	Zoom/Prog+		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	SUB		Subt				
	Goto		TV/R				
	Set/Tv/TXT/DVB		Text				
	Menu/Cancel Tv Format		Menu				
	Lang/Reveal Exit		Dual				
	Title/Info		Info				
	<</Hold		<<				
	>>/Size Text		>>				
	I<</Subpage/F		I<<				
	>>I/Index/EPG		>>I				
	Red/Prog/Tv/Radi		Red				
	Green/Slow/Audio		Green				
	Yellow/Rep/Freeze		Yellow				
	Blue/A-B/Subtitle		Blue				

