



Originalfernbedienung Ersatzfernbedienung




 



 
















| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | [<>] |  | Format |
|  | ♪ |  | Dual |
|  | [] |  | 3D |
|  | PAT |  | Smart |
|  | PIP Sel |  | Play |
|  | PIP Pos |  | Pause |
|  | PIP Size |  | Stop |
|  | AV |  | AV |
|  | PC |  | Media |
|  | TV |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Zoom |  | Eject |
|  | Swap |  | Pre Ch |
|  | Swap |  | Back |
|  | PR- |  | Ch - |
|  | PR+ |  | Ch + |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK / Freeze |  | Ok |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Info |  | Info |
|  | Menu |  | Menu |
|  | [+] |  | Options |
|  | [?] |  | D. Menu |
|  | [♦] |  | Subt |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Text / Mix |  | Text |
|  | [≡x] |  | Exit |
|  | [≡≡] |  | Guide |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

