



**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	USB / Card		Media
	Open / Close		Eject
	Audio		Dual
	Subtitle		Subt
	Search		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu
	Setup		Options
	Display		Info
	Title		Smart
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	<< REV		<<
	>> FWD		>>
	I<< PREV		I<<
	>>I NEXT		>>I
	II> Step		Shift + Pause
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause



