





 



 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Skip +10 Folder		0
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	I<<		I<< / Preset-
	Vol+		Vol+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung