
 


 

 

 
 

 
 

 
 

 
 






Originalfernbedienung Ersatzfernbedienung

|   |          |   |               |
|---|----------|---|---------------|
|    | Power    |    | Power         |
|    | Sleep    |    | Sleep         |
|    | Mute     |    | Mute          |
|    | Mode     |    | Media         |
|    | 1        |    | 1             |
|    | 2        |    | 2             |
|    | 3        |    | 3             |
|    | 4        |    | 4             |
|    | 5        |    | 5             |
|    | 6        |    | 6             |
|   | 7        |   | 7             |
|  | 8        |    | 8             |
|  | 9        |    | 9             |
|  | 0        |    | 0             |
|  | -/--     |  +  | Shift + Guide |
|  | Back     |    | Back          |
|  | Nicam/A2 |    | Dual          |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |       |
|---|-----------|---|-------|
|    | TXT/MIX   |    | Text  |
|    | Play      |    | Play  |
|    | Pause     |    | Pause |
|    | Stop      |    | Stop  |
|    | Rec       |    | Rec   |
|    | >>/Index  |    | >>    |
|    | <</Hold   |    | <<    |
|    | I<<       |    | I<<   |
|    | >>I       |    | >>I   |
|    | Cancel    |    | Exit  |
|   | Menu      |   | Menu  |
|  | DTV/Radio |  | TV/R  |
|  | Vol+      |  | Vol + |
|  | Vol-      |  | Vol - |
|  | Up        |  | Up    |
|  | Down      |  | Down  |
|  | Right     |  | Right |







**Originalfernbedienung Ersatzfernbedienung**

|   |          |   |              |
|---|----------|---|--------------|
|    | Left     |    | Left         |
|    | Enter    |    | Ok           |
|    | CH+      |    | Ch +         |
|    | CH-      |    | Ch -         |
|    | FAV      |    | Pre Ch       |
|    | EPG      |    | Guide        |
|    | Info     |    | Info         |
|    | List     |    | List         |
|    | Red      |    | Red          |
|   | Green    |   | Green        |
|  | Yellow   |  | Yellow       |
|  | Blue     |  | Blue         |
|  | Size     |  | Format       |
|  | Reveal   |  | 3D           |
|  | Subtitle |  | Subt         |
|  | Subpage  |  | AV           |
|  | FAV+     |  | Shift + Ch + |




 

 

 

 



 


 
**Originalfernbedienung Ersatzfernbedienung**

|   |      |   |              |
|---|------|---|--------------|
|  | FAV- |  | Shift + Ch - |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |
|   |      |   |              |









 



 
 







Originalfernbedienung Ersatzfernbedienung

|            |   |       |
|------------|---|-------|
| Power      |    | Power |
| Mute       |    | Mute  |
| [ I ]/Menu |    | Menu  |
| Exit       |    | Exit  |
| Source     |    | AV    |
| 1          |    | 1     |
| 2          |    | 2     |
| 3          |    | 3     |
| 4          |    | 4     |
| 5          |    | 5     |
| 6          |    | 6     |
| 7          |   | 7     |
| 8          |  | 8     |
| 9          |  | 9     |
| 0          |  | 0     |
| Subtitle   |  | Subt  |
| Text       |  | Text  |

Originalfernbedienung Ersatzfernbedienung

|        |   |         |
|--------|---|---------|
| Vol+   |    | Vol +   |
| Vol-   |    | Vol -   |
| CH+    |    | Ch +    |
| CH-    |    | Ch -    |
| Up     |    | Up      |
| Down   |    | Down    |
| Right  |    | Right   |
| Left   |    | Left    |
| OK     |    | Ok      |
| Recall |    | Back    |
| Info   |   | Info    |
| EPG    |  | Guide   |
| Freeze |  | Options |
| Red    |  | Red     |
| Green  |  | Green   |
| Yellow |  | Yellow  |
| Blue   |  | Blue    |





Originalfernbedienung Ersatzfernbedienung

|           |  |        |
|-----------|--|--------|
| Audio     |   | Dual   |
| I<</[≡+]  |   | I<<    |
| >>I/[≡..] |   | >>I    |
| [≡i]      |   | Smart  |
| Play      |   | Play   |
| Pause     |   | Pause  |
| Stop      |   | Stop   |
| REP/Rec   |   | Rec    |
| <</[≡o]   |   | <<     |
| >>/[≡?]   |   | >>     |
| FAV       |  | Pre Ch |
|           |  |        |
|           |  |        |
|           |  |        |
|           |  |        |
|           |  |        |
|           |  |        |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |
|--|--|--|
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |

