 


 











 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡]		Text
	Sleep		Sleep
	Color		Options
	[+]/◆		Info
	?		Smart
	16:9/[+]		Format
	I-II/[≡i]		Dual
	(<>)/X		Exit
	Up		Up
	P+		Ch +
	P-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Menu		Ok
	Inst		Media
	Source		AV
	P<P		Pre Ch
	Red/Picture		Red
	Picture		Shift + Format
	Green/Sound		Green
	Sound		Shift + Dual
	Yellow/Timer		Yellow
	Timer		Shift + AV
	Blue/Headphon		Blue
	Headphones		List
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
PP	PP	ZOOM ▲	Eject				
⊘	Mute	MUTE	Mute				

