



 

 





 





 

 

 
 










Originalfernbedienung Ersatzfernbedienung

	Main Menu		Menu
	Power		Power
	Rec		Rec
	Pause		Pause
	Stop		Stop
	<<		<<
	Play		Play
	>>		>>
	↶		I<<
	↷		>>I
	Guide		Guide
	LIB		Media
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	SUB		Subt
	Text		Text
	i		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	CH +		Ch +
	CH -		Ch -
	Mute		Mute
	TV / Radio		TV/R
	1		1
	2		2
	3		3





Originalfernbedienung   Ersatzfernbedienung

ghi 4	4	4	4
jkl 5	5	5	5
mno 6	6	6	6
pqrs 7	7	7	7
tuv 8	8	8	8
wxyz 9	9	9	9
&@_ 0	0	0	0
Audio	Audio	SOUND DUAL	Dual

Originalfernbedienung   Ersatzfernbedienung