






















Originalfernbedienung Ersatzfernbedienung

			Power
	Mute		Mute
	Menu		Menu
	EPG		Guide
	i		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Recall		Back
	Page+		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	Page-		Shift + Ch -
	Audio		Dual
	?		Smart
	Subtitle		Subt
	✓		Media
	Stop / Display		Stop
	Stop / Display		Shift + Info
	Play / Text		Play
	Play / Text		Text
	<<		<<
	Rec		Rec
	Pause		Pause
	>>		>>
	I<<		I<<
	>>I		>>I
	Red		Red
	Green		Green



