



 

 
 

 

 

 

 



 

 
 
 


 

 
 



 
 















 




 













Originalfernbedienung    Ersatzfernbedienung

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT / Recall		Smart
	SAT / Recall		Back
	Favorite		Pre Ch
	View		Info
	Cancel		Exit
	Up / Channel+		Up

Originalfernbedienung    Ersatzfernbedienung

	Up / Channel+		Ch +
	Down /		Down
	Down /		Ch -
	Right		Right
	Left		Left
	Select		Ok
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	A/V		AV
	Tune		Media
	Text		Text
	Subtitle		Subt
	Store		Options
	Reveal		3D
	Aspect		Format

