



 


 





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	TV		Shift + 1
	Timer		Sleep / Timer
	Lock		Smart / List
	VCR		Shift + 4
	Index		Info / Angle
	Mix		Text / Goto
	FAV/Main		Fav / Marker / PC
	Radio		TV/Radio /
	Left		Left
	Up		Up
	Right		Right
	Store		OK
	Down		Down
	Vol+		Vol+
	Channel-		CH- / Page-

Originalfernbedienung    Ersatzfernbedienung

	Channel+		CH+ / Page+
	Vol-		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	←/West		<< / Tune-
	0		0
	East/→		>> / Tune+

