

 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		Audio
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PREV.CH		P/C / FAV
	.		-/-- / EPG
	Mute		MUTE
	Vol+		VOL +
	Vol-		VOL -

**Originalfernbedienung Ersatzfernbedienung**

	CH+		CH +
	CH-		CH -
	Menu		MENU
	Back		BACK
	Info		INFO
	OK		OK
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	SAP		MEDIA
	Mode/Auto		OPT+
	Freeze		Pause
	Sleep		VOD
	Format		V-FOR

