





























 







Originalfernbedienung    Ersatzfernbedienung

|   |              |   |                       |
|---|--------------|---|-----------------------|
|    | Standby      |    | Power                 |
|    | Mute         |    | Mute / Dimmer         |
|    | EPG          |    | Guide / EPG / -/-     |
|    | Info         |    | Info / Angle          |
|    | TTX          |    | Text / Goto           |
|    | Audio        |    | Audio / Lang I/II     |
|    | Subtitle     |    | Subtitle / EQ         |
|    | Menu         |    | Menu / Home           |
|    | Up / CH+     |    | CH+ / Page+           |
|    | Up / CH+     |    | Up                    |
|   | Exit         |   | Exit / Cancel / Clear |
|  | Left / Vol-  |  | Vol-                  |
|  | Left / Vol-  |  | Left                  |
|  | OK           |  | OK                    |
|  | Right / Vol+ |  | Vol+                  |
|  | Right / Vol+ |  | Right                 |
|  | Favourite    |  | Fav / Marker / PC     |

Originalfernbedienung    Ersatzfernbedienung

|   |            |   |                   |
|---|------------|---|-------------------|
|    | Down / CH- |    | CH- / Page-       |
|    | Down / CH- |    | Down              |
|    | TV/Radio   |    | TV/Radio /        |
|    | 1          |    | 1                 |
|    | 2          |    | 2                 |
|    | 3          |    | 3                 |
|    | Recall     |    | Back / Return     |
|    | 4          |    | 4                 |
|    | 5          |    | 5                 |
|    | 6          |    | 6                 |
|   | Goto       |   | Shift +<br>Text / |
|  | 7          |  | 7                 |
|  | 8          |  | 8                 |
|  | 9          |  | 9                 |
|  | 0          |  | 0                 |
|  | Rev        |  | << / Tune-        |
|  | Fwd        |  | >> / Tune+        |



