 

 

 



















 

 



 



 



 
 
 

 



 

 

 

 



 















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|-----------------------------|
|  | Power |  | Power |
|  | [≡]/Text |  | Text / Goto |
|  | I-II |  | Audio / Lang I/II |
|  | [<>]/[+] |  | Shift + Picture / Format |
|  | AV/[?] |  | AV / Input / RDS |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | [...] |  | Subtitle / EQ |
|  | [1 2] Split Window |  | Display / Media |
|  | Cancel |  | Exit / Cancel / Clear |
|  | Option |  | Setup / OPT / |
|  | Tv Menu |  | Menu / Home |
|  | Digital Menu |  | D.Menu / Top |
|  | Up |  | Up |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------------------------|
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | A/D |  | Shift + Audio / Lang I/II |
|  | EPG |  | Guide / EPG / -/- |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | PR- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |



