













































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / TV/SAT		0
	0 / TV/SAT		Smart / List
	Page+		CH+ / Page+
	Audio		Audio / Lang I/II
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Left		Vol-
	OK		OK
	Right		Right
	Right		Vol+
	Down		Down
	Menu		Menu / Home
	Page-		CH- / Page-
	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	i		Info / Angle
	Text		Text / Goto
	FAV / Red		Fav / Marker / PC
	FAV / Red		Red / Netflix / Search
	Sleep		Sleep / Timer
	RCL / Blue		Blue / Prime Video / Random
	AUD / Green		Green / APP / Repeat
	LANG / Yellow		Shift + Audio / Lang I/II



