




Originalfernbedienung    Ersatzfernbedienung





 
 




 


 
 



 

 

 

 



	Power		Power
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung    Ersatzfernbedienung

	TV		TV/R
	Recall		Pre Ch
	World		Media
	Menu		Menu
	Exit		Exit
	Back		Back
	i/Info		Info
	Guide		Guide
	[≡]/Text		Text
	*/O		Format
	*/O..		3D
	Lang		Dual
	[≡]..		Subt
	[-O-]		Options
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Blue		Blue
	Rec		Rec
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Music/Photo/Movi		Smart
	Q.Menu		D. Menu

