

 



 

 



 



 











 

 





**Originalfernbedienung    Ersatzfernbedienung**







 

 

 
	Standby		Power
	Mute		Mute / Dimmer
	Fav		Fav / Marker / PC
	World		Smart / List
	TV/Radio		TV/Radio /
	Text		Text / Goto
	Mail		Display / Media
	Lib		D.Menu / Top
	Timers		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	Music/Movie/Phot		Sound / Title
	0/AV		0
	Info		Info / Angle
	Vol+		Vol+
	P↔P		Zoom / Size
	P+		CH+ / Page+
	Vol-		Vol-
	Opt		Setup / OPT /
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	Up		Up
	Exit		Exit / Cancel / Clear





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Left		Left				
	OK		OK				
	Right		Right				
	Menu		Menu / Home				
	Down		Down				
	Back		Back / Return				
	Subtitle		Subtitle / EQ				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Audio		Audio / Lang I/II				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				

