



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | SUBTIL |  | Subt |
|  | TV / SAT |  | Smart |
|  | FAV |  | Pre Ch |
|  | RCL |  | Back |
|  | Up / CH+ |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Down / CH- |  | Down |
|  | Down / CH- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | OK |  | Ok |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | TXT |  | Text |
|  | USB |  | Media |
|  | Info |  | Info |
|  | Audio |  | Dual |
|  | M / P |  | Options |
|  | Up / CH+ |  | Ch + |
|  | Page+ |  | Shift + Ch + |
|  | Page- |  | Shift + Ch - |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | Red / SAT | | AV |
| | Red / SAT | | Red |
| | Green / Zoom | | Green |
| | Green / Zoom | | Eject |
| | Yellow / Pause | | Yellow |
| | Yellow / Pause | + | Shift + Pause |
| | Blue / TV/Radio | | Blue |
| | Blue / TV/Radio | | TV/R |
| | << | | << |
| | >> | | >> |
| | Play | | Play |
| | Stop | | Stop |
| | I<< | | I<< |
| | >>I | | >>I |
| | Pause | | Pause |
| | Slow | + | Shift + Play |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

