

 

 



 

 


 
 



 

 


 


 
 
 



 
 
 
 

 

 
 

 
 

 
 








 

 

 



 








Originalfernbedienung Ersatzfernbedienung


 

 



 

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		AV
	FAV		Pre Ch
	Menu		Menu
	EPG		Guide
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up / CH +		Up
	Down / CH -		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Page +		Ch +
	Page -		Ch -
	Red / TTX		Red
	Red / TTX		Text
	Green / SUB.T		Green
	Green / SUB.T		Subt
	Yellow / Zoom		Yellow
	Yellow / Zoom		Eject
	Blue / MP		Blue





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 TV / Radio	 TV/R		
 Audio	 Dual		
 Pause	 Pause		
 TV / SAT	 Media		
 Rec	 Rec		
 P/N	 Format		
 Info	 Info		
 Pos	 Options		
	 Play		
	 Stop		
	 <<		
	 >>		

