 

 

 





 






 







 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	Play		Play / Slow
	<<		<< / Tune-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Up		Up
	CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Vol-		Vol-
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

 


 












	Right		Right
	Vol+		Vol+
	Record		Rec / Rec Mode
	CH-		CH- / Page-
	Down		Down
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	EPG		Guide / EPG / -/-
	4		4
	5		5
	6		6
	Back		Back / Return
	7		7
	8		8
	9		9




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	Play		Play / Slow
	<<		<< / Tune-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right / Vol+		Vol+
	Right / Vol+		Right
	Record		Rec / Rec Mode
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	EPG		Guide / EPG / -/-
	4		4
	5		5
	6		6
	Back		Back / Return
	7		7
	8		8
	9		9



