



 



 
 





 
 





 
 






 
 


 








 

 

 


 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol +		Vol +
	Vol -		Vol -

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Ch +		Ch +
	Ch -		Ch -
	Play		Play
	Pause		Pause
	Stop		Stop
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Red/Image		Red
	Green/Audio		Green
	Yellow/Sleep		Yellow
	Blue/Freeze		Blue
	←		Media
	→		Smart





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Rotate		Text				
	Exit		Exit				

