 

 

 





 







 

 





 



 



 

 

 





 

 



 

 

 

 





 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Aspect		Picture / Format
	V-Format		Shift + Picture / Format
	Mute		Mute / Dimmer
	Fav		Fav / Marker / PC
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	TTX		Text / Goto
	Epg		Guide / EPG / -/--
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5




**Originalfernbedienung    Ersatzfernbedienung**

	6		6
	List		Smart / List
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Ok		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	Ch+		CH+ / Page+
	Vol-		Vol-
	Ch-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Zoom		Zoom / Size
	USB		Shift + 8
	<<		<< / Tune-
	>>		>> / Tune+
	Timer		Sleep / Timer
	PVR		D.Menu / Top
	Page-		Shift + CH- /
	Page+		Shift + CH+ /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung