


 
 
 
 
 
 


 
 


 

 






 









 


 


 




 




Originalfernbedienung Ersatzfernbedienung

Mute		Mute / Dimmer
	Power	
AV		AV / Input / RDS
TV/RAD		TV/Radio /
Audio		Audio / Lang I/II
SUB		Subtitle / EQ
APP		Shift + Green / APP /
GUIDA		Guide / EPG / -/-
LISTA		Smart / List
Info		Info / Angle
Vol +		Vol+
Up		Up
P +		CH+ / Page+
Left		Left
OK		OK
Right		Right
Vol -		Vol-

Originalfernbedienung Ersatzfernbedienung

	Down	
	P -	
BACK	Back	
EXIT	Exit	
	Red	
	Green	
	Yellow	
	Blue	
	1	
	2	
	3	
	4	
	5	
	6	
	7	
	8	
	9	