










 













 



 

 




Originalfernbedienung Ersatzfernbedienung

	On / ST.BY		Power
	TV / Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	FAV		Pre Ch
	Back		Back
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Prog +		Ch +
	Prog -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu		Menu
	Audio		Dual





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Sub		Subt
	<< Rew		<<
	Fwd >>		>>
	I<< Prev		I<<
	Next >>I		>>I
	Rec		Rec
	File		Smart
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

