




 



 


 
 

 



















 



 
 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio		Dual
	TV / Rad		TV/R
	SUB		Subt
	P+		Shift + Ch +
	P-		Shift + Ch -
	---		Media
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok


 
 
 


Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Exit		Exit
	i		Info
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung		
	Text		Text
	PP		Pre Ch
	PP		Back

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

