

 


 

 
 


 

 

 



 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	Source		AV
	Sound		Shift + Dual
	Picture		Format

Originalfernbedienung Ersatzfernbedienung

	Audio 1/2		Dual
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Sleep		Sleep
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Index		Back





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Text		Text				
	List		List				
	Hold		Smart				
	Subtitle		Subt				
	Info		Info				
	Cancel		Exit				
	Reveal		TV/R				
	Zoom		Eject				

