





 






 
 





 











**Originalfernbedienung    Ersatzfernbedienung**







 

 

 




 



 

 

 


 
 





 


	Standby		Power
	Mute		Mute
	Display		Shift + Info
	Sleep		Sleep
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back

**Originalfernbedienung    Ersatzfernbedienung**

	LCD-Menu		Menu
	DVB-Menu		D. Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Source		AV
	PMode		Shift + Format
	SMode		Shift + Dual
	Exit		Exit
	Text		Text
	Hold		Stop





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	PIP		3D
	Digest		Smart
	Red		Red
	Yellow		Yellow
	Green		Green
	Blue		Blue
	Size		Eject
	Reveal		List
	Subpage		Subt
	TV / Radio		TV/R
	Nicam		Options
	Lang		Dual
	Page-		Shift + Ch -
	Page+		Shift + Ch +
	EPG		Guide
	FAV		Pre Ch
	Index		Media
	Info		Info

