
 
 


 
 


 
 


 



 

 





 

 

 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Play	
Reveal		Pause	
Txt Stop		Stop	
Info		List	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

8		8		
9		9		
Guide -/-- 1.		Guide		
0/10		0		
2.Fav P/C 2.		Pre Ch		
Red		Red		
Green		Green		
Yellow		Yellow		
Blue		Blue		
Mix Scan	 + 	Shift + TV/R		
Disp	 + 	Shift + Info		

