







 

 



 

 

 

 

 

 



 

 







**Originalfernbedienung    Ersatzfernbedienung**










 


	Power		Power
	Timer		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	PM		Smart / List
	Info		Info / Angle









**Originalfernbedienung    Ersatzfernbedienung**

	Input		AV / Input / RDS
	Audio		Audio / Lang I/II
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Left / Vol-		Vol-
	Left / Vol-		Left
	Menu		Menu / Home
	Right / Vol+ / Enter		Right
	Right / Vol+ / Enter		Vol+
	Right / Vol+ / Enter		OK
	[ + ]		>> / Tune+
	Down / CH-		CH- / Page-
	Down / CH-		Down
	=>1		>>  / Preset+
	[ - ]		<< / Tune-
	1<=		l<< / Preset-
	Red / EPG		Red / Netflix / Search





Originalfernbedienung	Ersatzfernbedienung
 Red / EPG	 +  Shift + Guide / EPG / -/--
 Green / Fav	 Green / APP / Repeat
 Green / Fav	 Fav / Marker / PC
 Yellow / Digest	 Yellow / YouTube / Repeat
 Blue / Pause	 Blue / Prime Video / Random
 Blue / Pause	 Pause / Step / Freeze
 Info / Reveal	 +  Shift + Info / Angle
 Up / Size	 +  Shift + Up
 Up / Size	 Zoom / Size
 Subtitle / Stop	 Stop / Hold
 Subtitle / Stop	 Subtitle / EQ
 4:3/16:9	 Picture / Format
 Left / Index	 +  Shift + Left
 Menu Red	 +  Shift + Menu /
 Right / Sub.Pg	 +  Shift + Right
 TTX On/Off/Mix	 Text / Goto
 Radio	 TV/Radio /

Originalfernbedienung	Ersatzfernbedienung
 Down Red	 +  Shift + Down
 Enter Red	 +  Shift + OK
 Exit	 Exit / Cancel / Clear

