 



 
 
 
 

 

 


 
 



Originalfernbedienung Ersatzfernbedienung

 


On/Off		Power
Mute		Mute
Update		Play
Reveal		Pause
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Back		Back

Originalfernbedienung Ersatzfernbedienung

Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Green		Green	
Yellow		Yellow	
Blue		Blue	

Originalfernbedienung	Ersatzfernbedienung

