

 





 



 

 

 







 

 

 

 

 
 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|--|------------------------|
|  | POWER |  | Power |
|  | INFO |  | Info / Angle |
|  | HDMI CONTROL |  | Smart / List |
|  | SLEEP |  | Sleep / Timer |
|  | SCREEN |  | Picture / Format |
|  | SOURCE |  | AV / Input / RDS |
|  | PRESETS |  | Setup / OPT / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | ZOOM/RED/▲ |  | Zoom / Size |
|  | ZOOM/RED/▲ |  | Shift + CH+ / |
|  | ZOOM/RED/▲ |  | Red / Netflix / Search |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | REPEAT/GREEN/▼ |  | Shift + CH- / |

Page-

 

 







 









 


 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | REPEAT/GREEN/▼ |  | Green / APP / Repeat |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | ROOT/YELLOW |  | Yellow / YouTube / Repeat |
|  | RETURN |  | Back / Return |
|  | 0 |  | 0 |
|  | MENU |  | Menu / Home |
|  | TITLE/BUE |  | Sound / Title |
|  | TITLE/BUE |  | Blue / Prime Video / Random |
|  | UP |  | Up |
|  | LEFT |  | Left |
|  | OK/SELECT |  | OK |
|  | RIGHT |  | Right |
|  | DOWN |  | Down |
|  | P+ |  | CH+ / Page+ |
|  | P- |  | CH- / Page- |



 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------------------------|
|  | V- |  | Vol- |
|  | V+ |  | Vol+ |
|  | FAV |  | Fav / Marker / PC |
|  | LANG |  | Audio / Lang I/II |
|  | SUBTITLE |  | Subtitle / EQ |
|  | MUTE |  | Mute / Dimmer |
|  | SWAP/↔ |  | Shift + Back / Return |
|  | EPG |  | Guide / EPG / -/- |
|  | [*] / [..] |  | D.Menu / Top |
|  | TEXT |  | Text / Goto |
|  | C |  | Exit / Cancel / Clear |
|  | DISPLAY |  | Display / Media |
|  | ANGLE |  | Shift + Info / Angle |
|  | SEARCH MODE |  | Shift + Red / Netflix / |
|  | REC |  | Rec / Rec Mode |
|  | STOP |  | Stop / Hold |
|  | PLAY |  | Play / Slow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | PAUSE |  | Pause / Step / Freeze |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

