





























 




















 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Open/Close		Eject / Surround
	Intro		Smart / List
	Source		AV / Input / RDS
	Info		Info / Angle
	I<<		I<< / Preset-
	Menu / Rep		Menu / Home
	Menu / Rep		Green / APP / Repeat
	EQ		Subtitle / EQ
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>I		>>I / Preset+
	10-/Tun-		Down
	10-/Tun-		Shift + << / Tune-

Tune-

Originalfernbedienung Ersatzfernbedienung

	10+/Tun+		Up
	10+/Tun+		Shift + >> /
	Stop / Auto		Stop / Hold
	Stop / Auto		OK
	Fold-		CH- / Page-
	Fold+		CH+ / Page+
	Prog/Memory		TV/Radio /
	Vol-		Vol-
	Vol+		Vol+
	Clock		Shift + Sleep / Timer
	Mute/Alarm		Mute / Dimmer

