

























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/AV		0
	Mute		Mute / Dimmer
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Left		Left
	OK		OK
	P-		CH- / Page-
	Down		Down
	A/B		Shift + Yellow / YouTube /
	TXT		Text / Goto
	Red/Picture		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Yellow/Format		Yellow / YouTube / Repeat
	Blue/Audio		Blue / Prime Video / Random
	Peri		Smart / List
	Brightness/DX-		I<< / Preset-
	Brightness/DX+		>>I / Preset+































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/AV		0
	Mute		Mute / Dimmer
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Vol-		Vol-
	OK		OK
	Down		Down
	P-		CH- / Page-
	A/B		Shift + Yellow / YouTube /
	TXT		Text / Goto
	Red/Picture		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Yellow/Format		Yellow / YouTube / Repeat
	Blue/Audio		Blue / Prime Video / Random
	Brightness/DX-		I<< / Preset-
	Brightness/DX+		>>I / Preset+

































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/AV		0
	Mute		Mute / Dimmer
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Vol-		Vol-
	OK		OK
	Down		Down
	P-		CH- / Page-
	A/B		Shift + Yellow / YouTube /
	TXT		Text / Goto
	Red/Picture		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Yellow/Format		Yellow / YouTube / Repeat
	Blue/Audio		Blue / Prime Video / Random
	Peri		Smart / List
	Brightness/DX-		I<< / Preset-
	Brightness/DX+		>>I / Preset+

