 



 

 

 

 

 

 
 
 

 

 







 

 



 

 

 

 



 

 
 







 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	D.Menu		D.Menu / Top
	Power		Power
	Open / Close		Eject / Surround
	Info		Info / Angle
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Audio I/II		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	CH. List		Smart / List
	Screen		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Q.View		Shift + Menu /
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/-
	Vol +		Vol+
	P+		CH+ / Page+
	Vol -		Vol-
	P -		CH- / Page-
	Menu		Menu / Home
	FAV		Fav / Marker / PC
	Up		Up
	Left		Left
	OK		OK



