 











 

 







 














**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+













 

 










 
 
**Originalfernbedienung Ersatzfernbedienung**

	V-		Vol-
	World/Internet		Smart / List
	P-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Music/Camera		Display / Media
	TV Guide		Guide / EPG / -/-
	*/O		Shift + 1
	*/Q		Shift + 2





Originalfernbedienung Ersatzfernbedienung

	[≡]/Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Lang		Audio / Lang I/II
	[≡]..		Sound / Title
	[-O-]		Setup / OPT /
<< button icon" data-bbox="228 545 261 578"/>	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung