




 

 

 

 



 

 

 
 
 

 



 
 

 











 



 



 







 



 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Pre Ch
	CH List		List
	EPG		Guide
	3D		3D
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung


 


 

	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Info		Info
	Menu		Menu
	Mute		Mute
	Exit		Exit
	Return		Back
	Media		Media
	Eco		Shift + 3D
	FAV		Shift + Pre Ch
	HiSmart@		Smart
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left




**Originalfernbedienung Ersatzfernbedienung**

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Subt.		Subt
	Text/Mix		Text
	P.Mode	 + 	Shift + Format
	Language/I/II		Dual
	S.Mode	 + 	Shift + Dual
	Size		Format
	T.Shift		Sleep
	Still/Reveal		Options
	Rec/PVR		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<</Hold		<<

**Originalfernbedienung Ersatzfernbedienung**

	>>/Index		>>
	I<</Sub.Code		I<<
	>>I/Cancel		>>I

