








 



 

 
 




 



 



 









 

 




 



 


 
 


 

 

 

 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV
	Internet		Smart
	Sleep		Sleep
	Presets		Subt
	Multimedia		Media
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Lang		Dual
	[≡]		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow

**Originalfernbedienung Ersatzfernbedienung**

	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Return		Shift + Back
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit



