








 

 

 

 











 




















 



 
 

 
 
 
 



 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	[i+]		Info
	TV/DTT		Smart
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[> <]		Format
	White		Pre Ch
	I/II/[≡i]		Dual

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text
	[≡+]/Status		3D
	[...]		Subt
	[≡?]/Skip		Options
	Menu		Menu
	Guide		Guide
	Nothing 3		Shift + 3
	Exit		Exit





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Tv/Radio		TV/R
	[+]		Eject
	[≡o]/Q.View		Media
	Nothing 1		Shift + 1
	Nothing 2		Shift + 2

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power				
	P+		Ch +				
	P-		Ch -				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Menu		Menu				
	Pause		Pause				
	Play		Play				
	Stop		Stop				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				



