













 





 



 

 



 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Contrast		Options
	Audio		Shift + Dual
	O<->O		TV/R
	Input		AV
	I+		Info
	Timer		Shift + AV
	I / II		Dual
	Red / Text		Red
	Green / Subtitle		Green
	Green / Subtitle		Subt
	Yellow / PIP Swap / A/B		Yellow
	Blue		Blue
	Picture		Menu
	Recall		Pre Ch
	Up / P +		Up
	Up / P +		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	Down / P -		Down
	Down / P -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Mute		Mute
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



