



**Originalfernbedienung    Ersatzfernbedienung**


 












 
 



 
 




 


 

	Power		Power
	[i+]		Info
	DTT/TV		TV/R
	AV1		Shift + 1
	AV2		Shift + 2
	AV3		Shift + 3
	AV4		Shift + 4
	AV5		Shift + 5
	RGB1		Shift + 7
	RGB2		Shift + 8
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

**Originalfernbedienung    Ersatzfernbedienung**

	♪ / S.Mode		Shift + Dual
	⦿ / P.Mode		Shift + Format
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	0		0
	2-4-12 / [▶ ◀]		3D
	[  ≡ ]		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡i]		List
	[≡X]		Smart
	[...]/Slide Show		Subt
	[≡?]/Rotate		Pre Ch
	[≡]		Text
	Swivel		Sleep
	[<>]		Format
	Photo		Media





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Menu		Menu				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				
	P+		Ch +				
	P-		Ch -				





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0

