








 






 

 
 

 

 




 

 

 














 

 

 

 













 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Set		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Home		Smart
	Pause		Pause
	Play		Play
	Back		Back
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	On Page		TV/R
	Next Page		Options
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Delete		Guide





Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
# 输入法	AV
Input	AV

Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

