



**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Source		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P Mode		Format
	S Mode		Dual
	Freeze		Smart
	TXT		Text
	Mix / Fav List		Pre Ch
	Size / Subtitle		Subt
	Cancel / Audio		Shift + Dual
	Record		Rec
	<< / Index		<<
	>> / Hold		>>
	I<< / Reveal		I<<

**Originalfernbedienung    Ersatzfernbedienung**

	>>I / Subpage		>>I
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play/Pause / Timeshift		Play
	Play/Pause / Timeshift		Pause
	Stop / EPG		Stop
	Stop / EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	TV / Radio		TV/R
	CH +		Ch +





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
CH -	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
DISPLAY	INFO
RECALL	RETURN BACK

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

