


**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |                           |
|---|--------------|---|---------------------------|
|    | Standby      |    | Power                     |
|    | A-B          |    | Yellow / YouTube / Repeat |
|    | Repeat       |    | Green / APP / Repeat      |
|    | Open / Close |    | Eject / Surround          |
|    | Subtitle     |    | Subtitle / EQ             |
|    | Angle        |    | Info / Angle              |
|    | Language     |    | Audio / Lang I/II         |
|    | OSD          |    | Display / Media           |
|    | L/R          |    | CH+ / Page+               |
|    | P/N          |    | CH- / Page-               |
|   | Clear        |   | Exit / Cancel / Clear     |
|  | Program      |  | TV/Radio /                |
|  | Setup        |  | Setup / OPT /             |
|  | Up           |  | Up                        |
|  | Enter        |  | OK                        |
|  | Left         |  | Left                      |
|  | Play         |  | Play / Slow               |

**Originalfernbedienung    Ersatzfernbedienung**

|   |       |   |                        |
|---|-------|---|------------------------|
|    | Right |    | Right                  |
|    | PBC   |    | D.Menu / Top           |
|    | Down  |    | Down                   |
|    | Title |    | Sound / Title          |
|    | Prev  |    | I<< / Preset-          |
|    | Rev   |    | << / Tune-             |
|    | Fwd   |    | >> / Tune+             |
|    | Next  |    | >>I / Preset+          |
|    | Slow  |    | Shift + Play /         |
|    | Step  |    | Shift + Pause / Step / |
|   | Pause |   | Pause / Step / Freeze  |
|  | Stop  |  | Stop / Hold            |
|  | 1     |  | 1                      |
|  | 2     |  | 2                      |
|  | 3     |  | 3                      |
|  | Zoom  |  | Zoom / Size            |
|  | 4     |  | 4                      |



