



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	RED		Red
	GREEN		Green
	YELLOW		Yellow
	BLUE		Blue
	HOME		Shift + Smart
	MENU		Menu
	OPTION		Options
	BACK		Back
	INFO		Info
	UP		Up
	DOWN		Down
	RIGHT		Right
	LEFT		Left
	OK		Ok
	VOL+		Vol +
	VOL-		Vol -

Originalfernbedienung Ersatzfernbedienung

	MUTE		Mute
	CH+		Ch +
	CH-		Ch -
	<<		<<
	PLAY		Play
	>>		>>
	STOP		Stop
	PAUSE		Pause
	REC		Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



