





 















 
 
 
 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	OPT		Options
	Back		Back
	Exit		Exit
	EPG		Guide
	Info		Info




 


 
Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	TXT		Text
	TV/♪		TV/R





**Originalfernbedienung    Ersatzfernbedienung**

	*		Pre Ch
	APP		Media
	Disp	 + 	Shift + Info

**Originalfernbedienung    Ersatzfernbedienung**