

 
 



 

 

 


 

 
 

 
 

 
 
 
 

 
 
 
 


 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Help		Help / Info
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Enter
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
	Mute		Shift + Blank / Mute
	Custom		Mode
	Blank		Blank / Mute
	Source		Source
	Presets		Eco / Aspect
	Auto Image		Auto
	Resize		Freeze / Timer

Originalfernbedienung Ersatzfernbedienung

