


Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|-----------------------------|
| | Power | | Power |
| | Screen | | Picture / Format |
| | Lang | | Audio / Lang I/II |
| | Subtitle | | Subtitle / EQ |
| | www | | Smart / List |
| | Red/▲ | | Red / Netflix / Search |
| | Red/▲ | | Shift + CH+ / |
| | Green/▼ | | Green / APP / Repeat |
| | Green/▼ | | Shift + CH- / |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|-----------------------|
| | 7 | | 7 |
| | 8 | | 8 |
| | [≡]/Text | | Text / Goto |
| | 9 | | 9 |
| | 0 | | 0 |
| | Recall | | Back / Return |
| | Up | | Up |
| | Menu | | Menu / Home |
| | Left | | Left |
| | Right | | Right |
| | Return | | Shift + Back / Return |
| | Down | | Down |
| | OK | | OK |
| | Source | | AV / Input / RDS |
| | FAV | | Fav / Marker / PC |
| | Presets | | Setup / OPT / |
| | Sleep | | Sleep / Timer |



