





 

 

 

 





 

 









 

 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio I/II		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



 
 
 


 




Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Auto		Smart / List
	Display		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat









Originalfernbedienung Ersatzfernbedienung







 

 



 





 











 



	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Hold		Shift + Stop /
	Repeat		Shift + Green / APP /
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	<< / Reveal		<< / Tune-
	>> / Subpage		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Timeshift		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio I/II		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



 

 




















Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	<<		<< / Tune-
	>>		>> / Tune+
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Timeshift		Smart / List
	EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

